


Buzzer Bracket

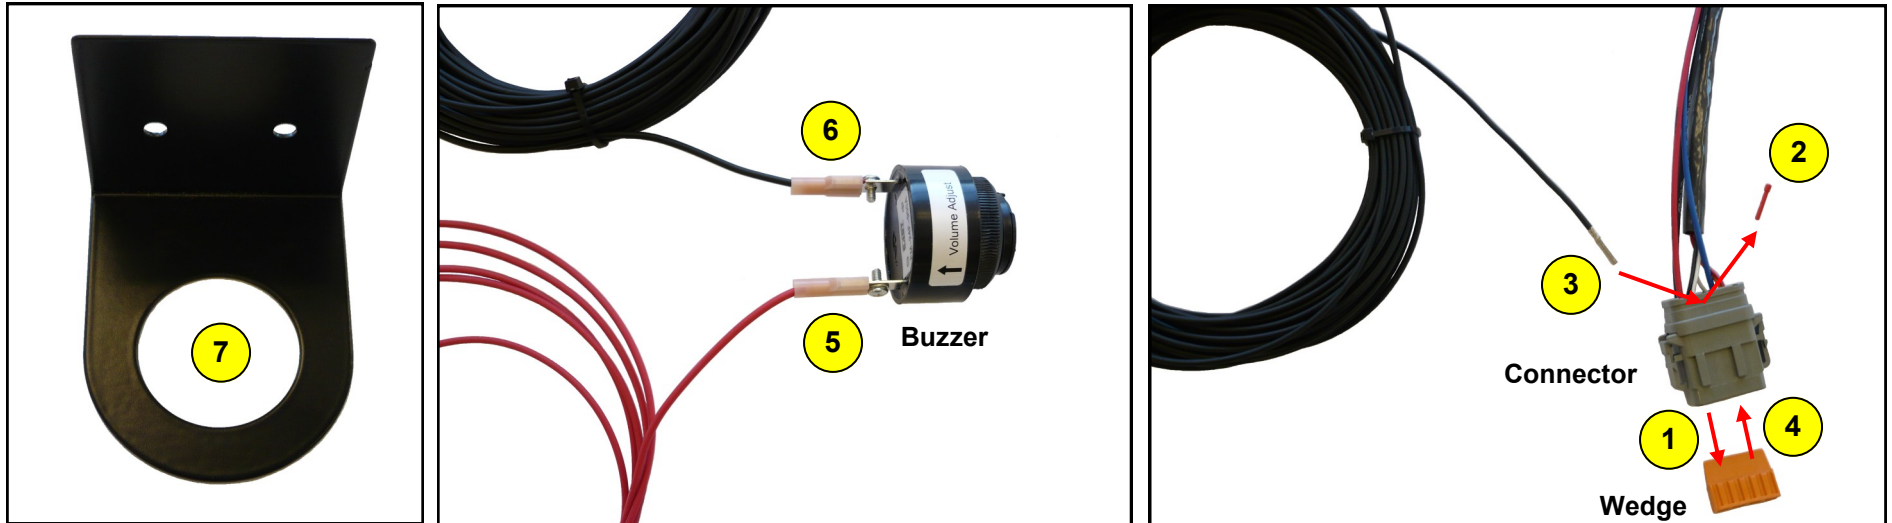

- 1 Using needle nose pliers, remove the orange wedge from the connector.
- 2 Remove and discard the red seal plug pin from pin 10. It comes out from the back of the connector.
- 3 Insert the black terminated wire into pin 10 from the rear of the connector. Be sure that it “clicks” into place and is seated properly.
- 4 Replace the orange wedge into the front of the connector and route the wires to the buzzer location.
- 5 Crimp one of the pink terminals onto the red wire and attach it to the positive (+) terminal on the buzzer.
- 6 If needed, cut the black wire to desired length, then crimp the other pink terminal onto the stripped end of the black wire and attach it to the negative (-) terminal on the buzzer.
- 7 Install the buzzer into the bracket and secure it in a location where it can be heard by the vehicle operator.