




## PreView® Off Road Relay Harness Installation Instructions



10335 W. Emerald St.  
Boise, Idaho 83704  
Phone 1.866.977.7326

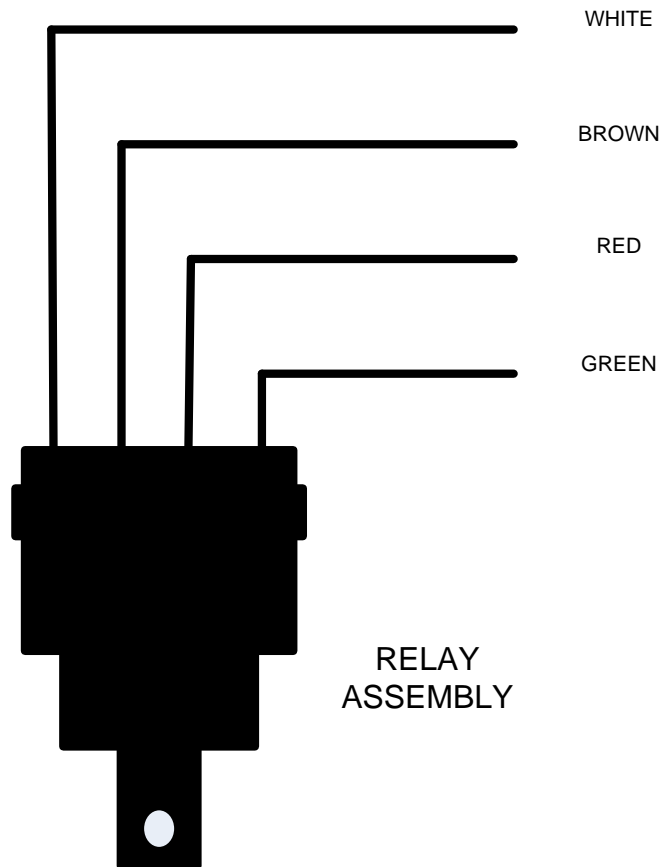

1. Disconnect backup alarm.
2. Connect the brown and white wires from the Off Road Relay Harness to the backup alarm circuit. (Backup alarm wires will vary in color and polarity and will not affect the operation of the relay.)
3. Connect the red wire from the Off Road Relay Harness to the positive terminal of the battery or a similar source.
4. Connect the green wire from the Off Road Relay Harness to the positive terminal of the backup alarm and the red wire on the PreView™ harness.
5. Connect the negative terminal on the backup alarm to chassis ground.
6. Connect the black wire on the PreView harness to chassis ground.